

Purpose

Technique STNPE sets whether station observations related to PE and the estimated PE are to be printed by Function MAPE.

Valid values are 0, 1 and 2.

The Global default is 0.

This Technique is Universal.

If Technique PRLASTDY has been specified then only the last day of observed data will be printed.

Form of Input

STNPE(integer)

where integer is 0, 1 or 2 indicating:

0 = do not print

1 = print station observations related to PE and
the estimated PE

2 = print only station PE estimates

Example

STNPE(2)

Station PE estimates will be printed.